


PROGRAMMING THE F700 MITSUBISHI DRIVE.




Make sure drive is not running.


- 1 Push PU/EXT until PU Light is lit.

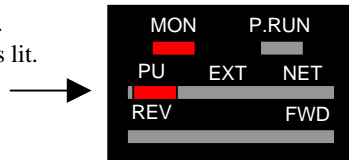


- 2 Push MODE Button until 1st letter of display is "P 1" or some other P number.

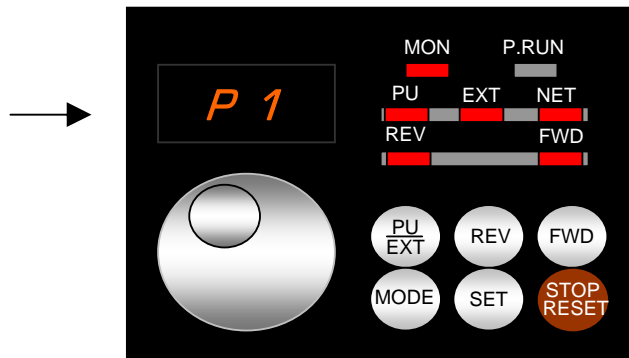


- 3 With Dial scroll thru the Parameters until you get to the one you want to change.

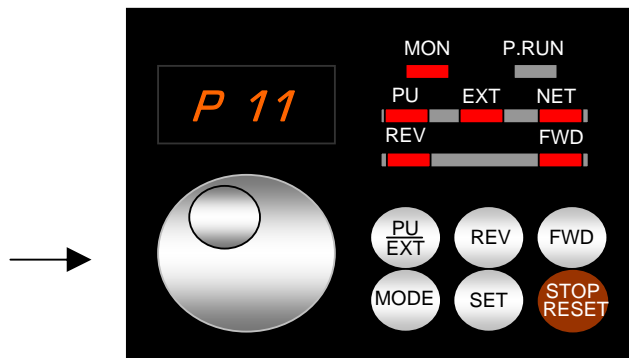


4 Push the SET Button. The number you see now is the value stored in that Parameter.

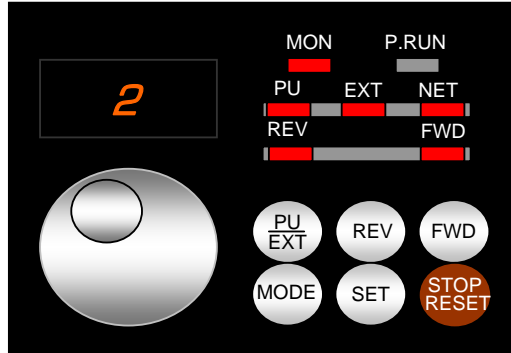


5 With Dial scroll UP or DOWN to change to the value you want.

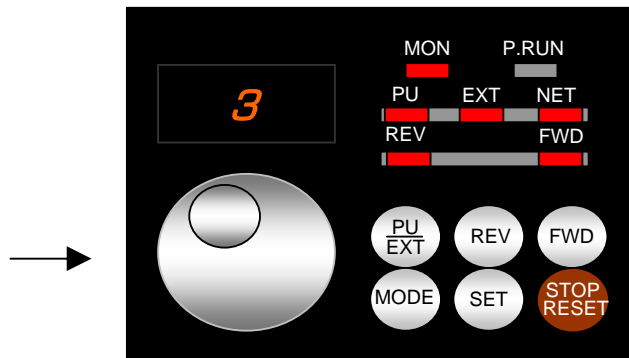

6 Push the SET Button. This stores the change you have just made.

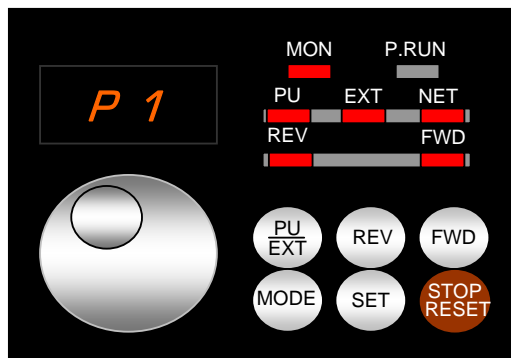


7 Push the MODE Button until you get back to the Frequency Screen. It will probably say "0.00".

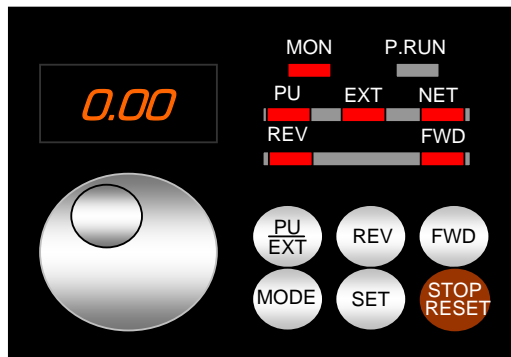

8 If you are want to Start & Stop and control Speed thru the keypad, leave the PU Light lit.

9 If you are Starting and Stopping from a Relay or a Pushbutton or something else.
Push the PU/EXT Button until the EXT Light is lit.

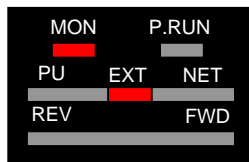

YOU ARE NOW READY TO RUN THE DRIVE.

